


# XM Training Notes


## Helpful notes


On/off button located underneath the rear of machine slightly to the right.  
Once loaded you will see this screen below;

 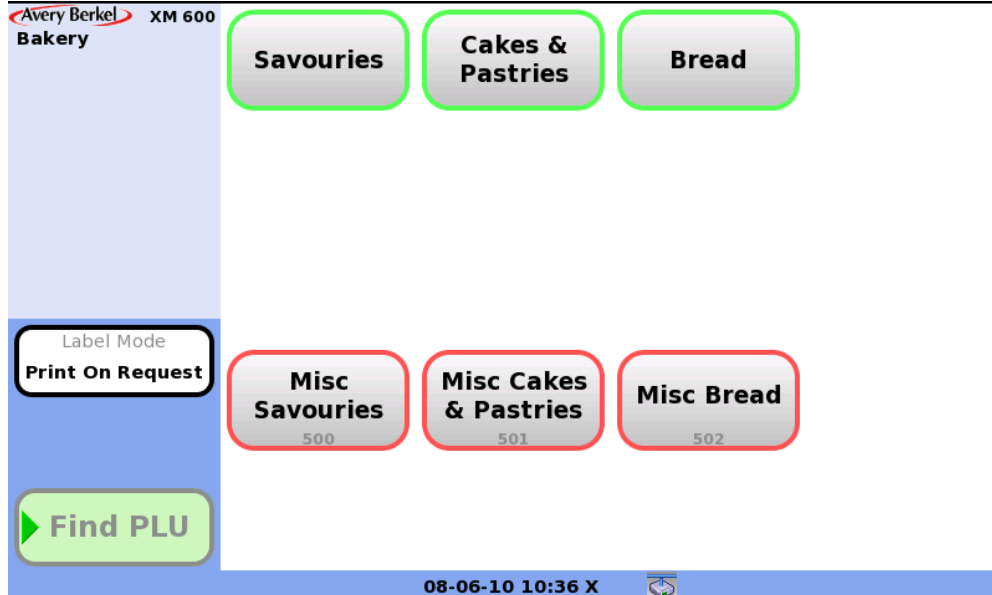




**Screen Notes;** If button has green border there are product screens behind, If button has red border then this is a product. The find PLU function is used for typing in your product number or searching for additional products.

## Printing a label

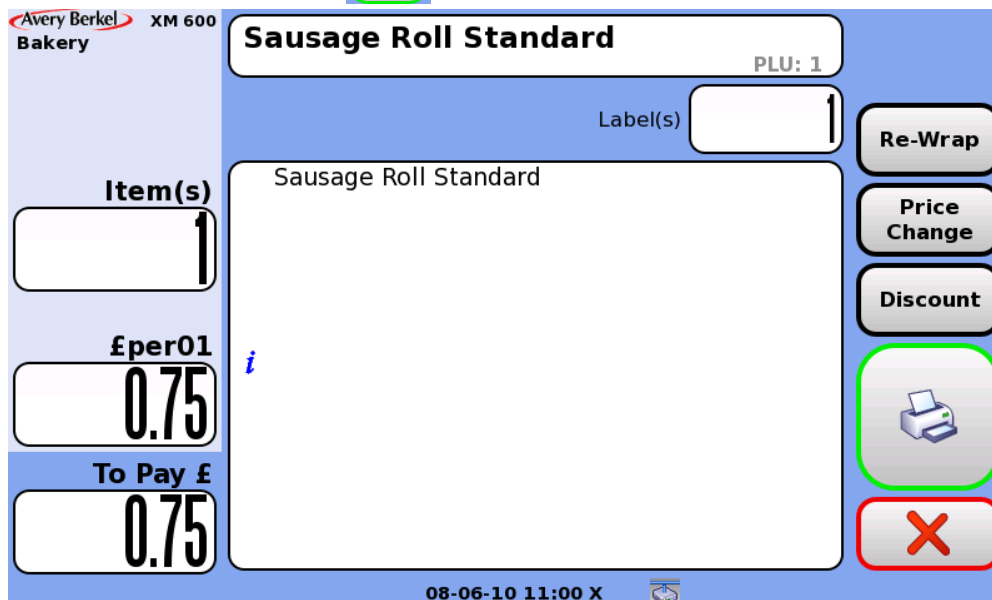
Select Product then press  on right hand side, see below example


 


If you are selling multiple items such as 2 x sausage rolls press  (this then goes green) then press two on your keypad this will multiply your price and finally press your print button. If you require multiple labels for each item, press , type in the qty of labels required then press  key.

## Changing price


On every product you select, you will see on the right hand side the price change function, once selected you will see the following screen

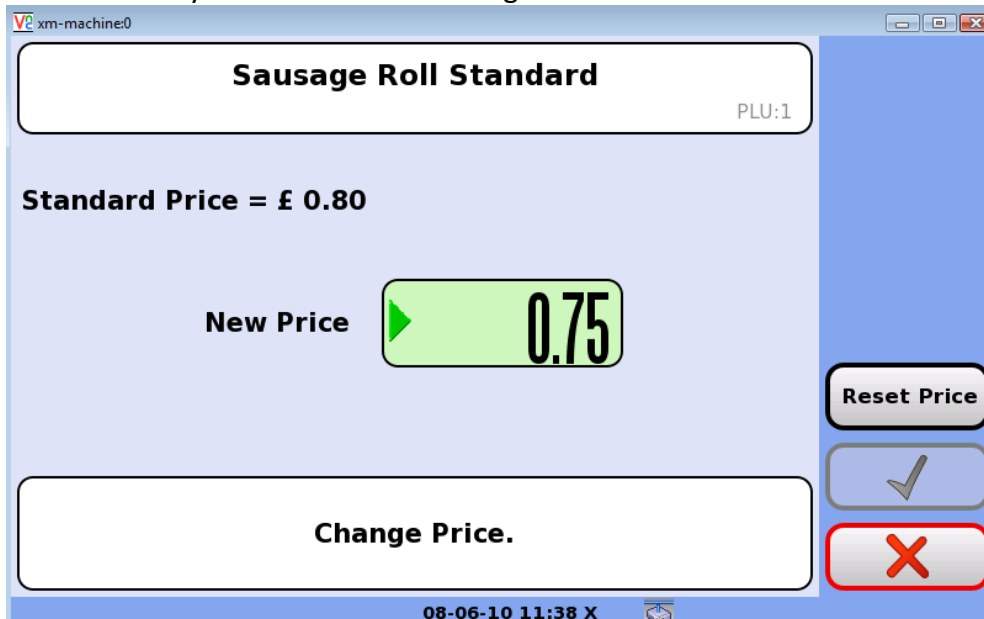

Type in on your keypad your new price then press the  key, which will highlight in green. You will be automatically returned to the product screen you will then need to press the  button and re-enter on your keypad number 1 to refresh the price update.

## Discounts


Select a product and press the discount button you will see the following screen

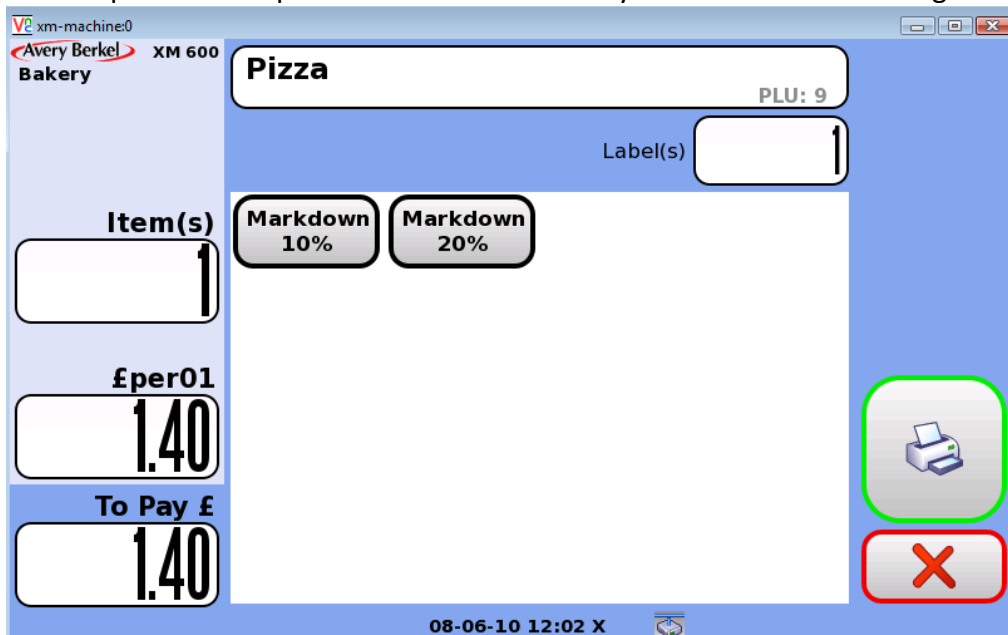
 


Press your required discount level

Continued on next page

## Discounts cont

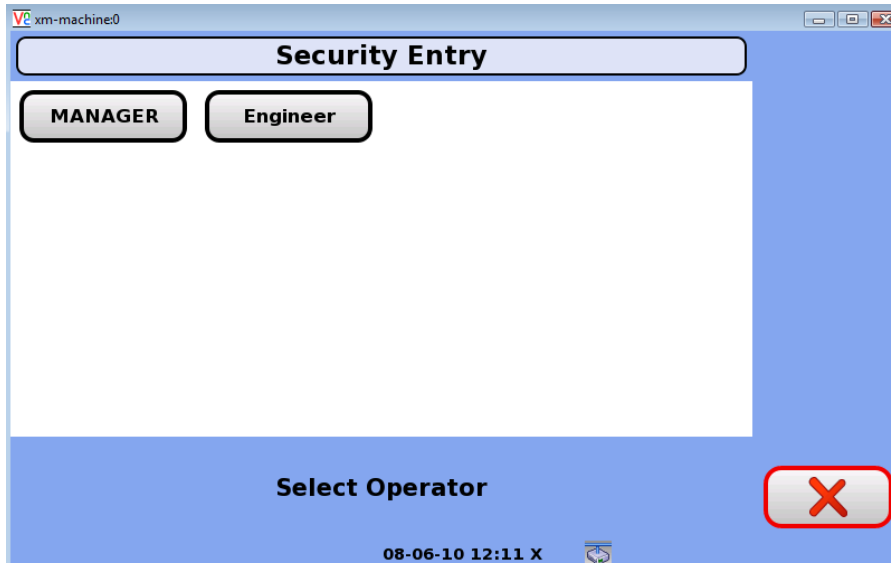

Press  the type in 1111 for the pin number, press the  button and re-enter on your keypad number 1 to refresh the price.