



# SERVICE MANUAL

## MIXER GRINDER TABLE TOP BG+30T

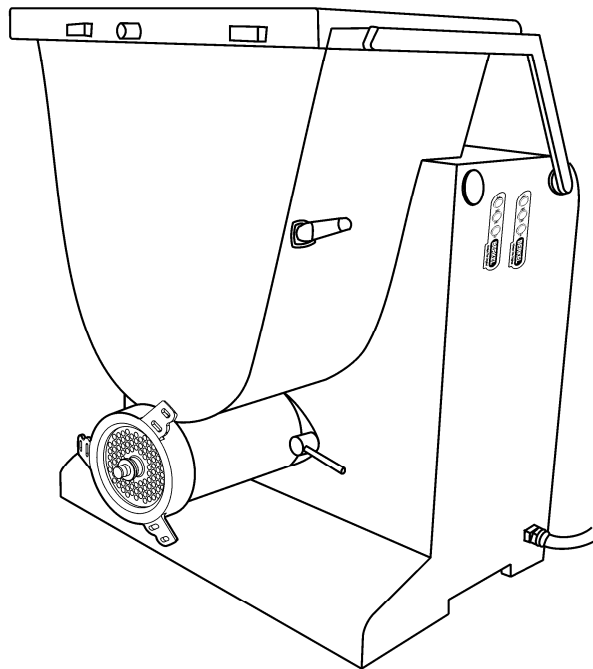


Exploded view BG+30T

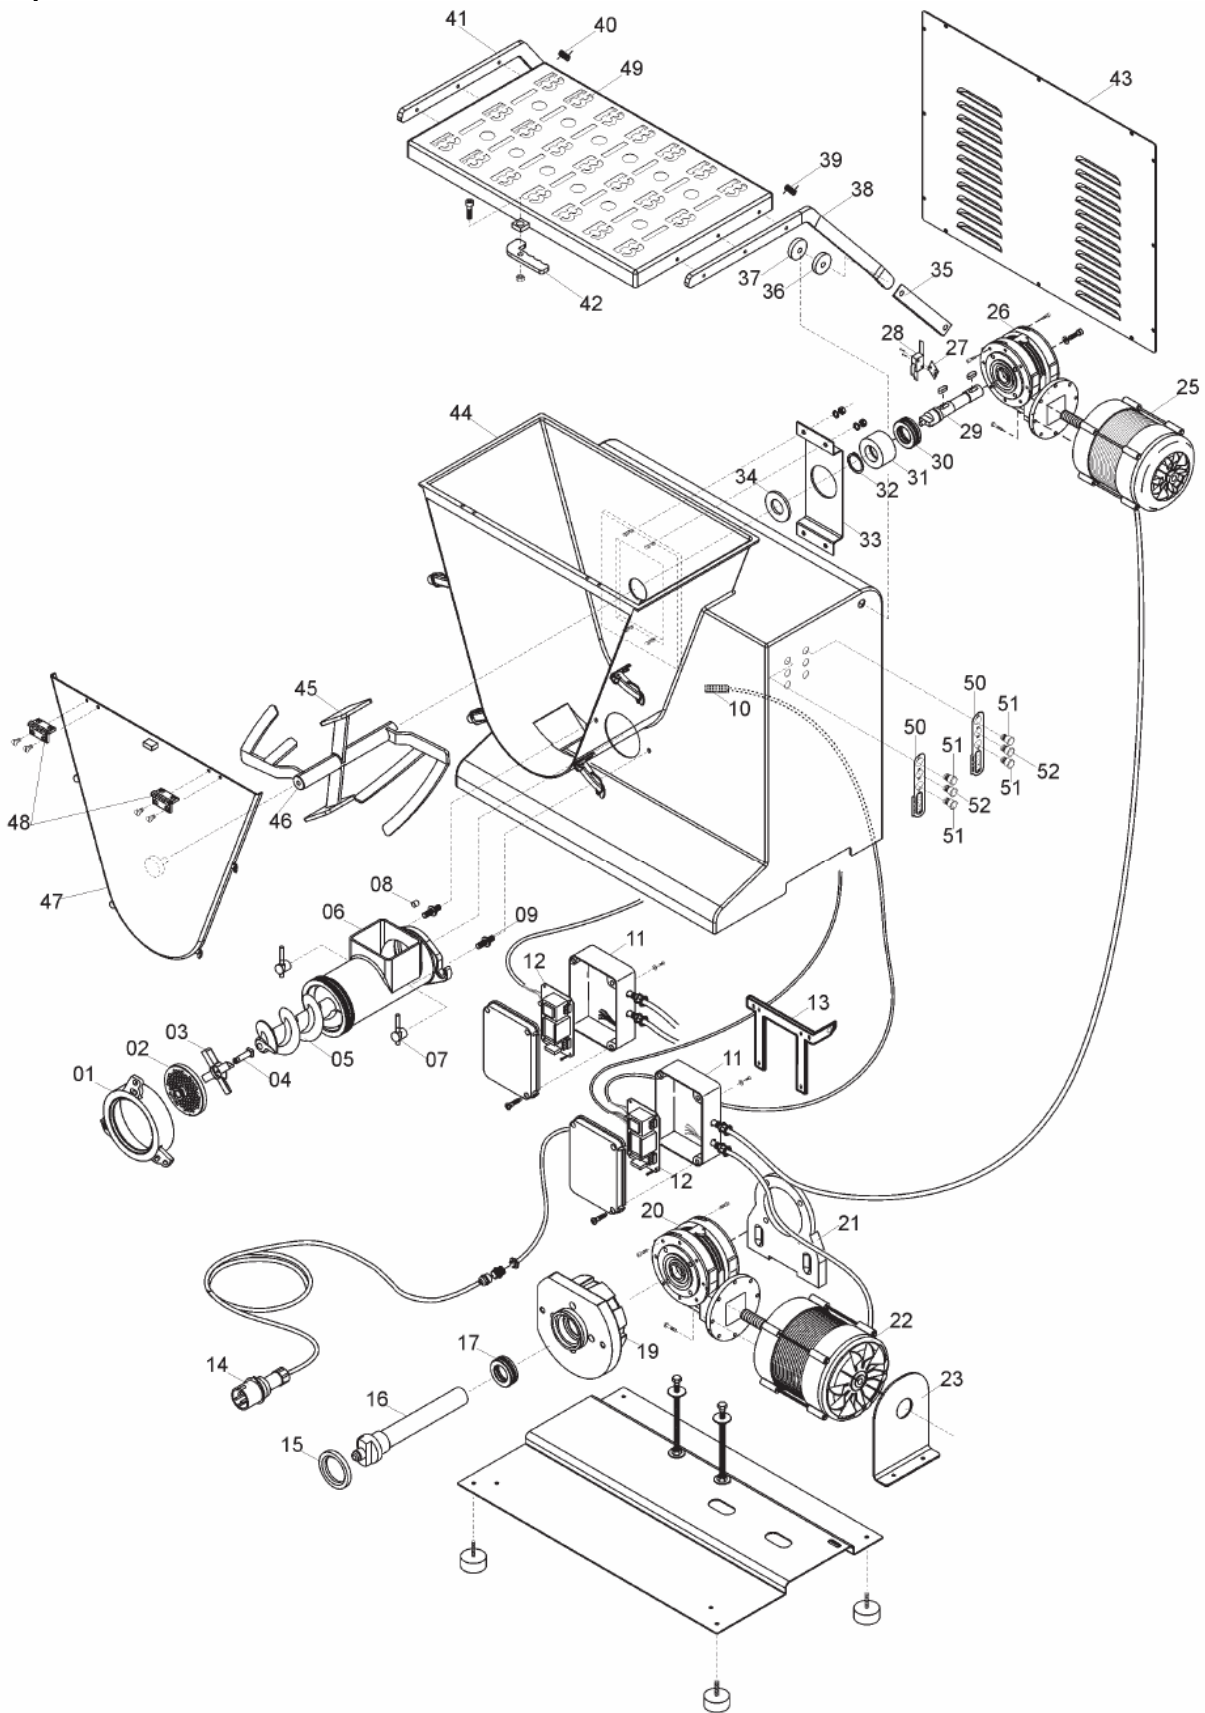

## Spare Parts BG+30T

<b>PART NUMBER</b>	<b>COD.</b>
08	LF1010004
14	LF1010014
12	LF1033020
51	LF1041000
52	LF1041001
50	LF1035800
10	LF1033302
28	LF1033305
11	LF1041006
17	LF1134001
30	LF1143001
15	LF1239401
34	LF1243001
46	LF1495001
32	LF1513006
48	LF1595002
25	LF1838301
22	LF1839701
04	LF2033013
01	LF2039789
13	LF2033310
27	LF2033311
20	LF2039414
21	LF2039415
05	LF2039703
09	LF2039722
16	LF2039725
18	LF2039728
19	LF2039731
07	LF2039743
33	LF2095006
26	LF2043015
31	LF2043021
06	LF2093001
47	LF2093008
44	LF2093010
43	LF2093013
23	LF2093016
38	LF2093019
41	LF2093022
35	LF2093024
37	LF2093025
36	LF2093028
45	LF2093033
49	LF2093060
42	LF2093043
39	LF2093046
40	LF2093049
29	LF2095010

Electrical circuit diagram BG+30T (1phase and 3phase) 1/2

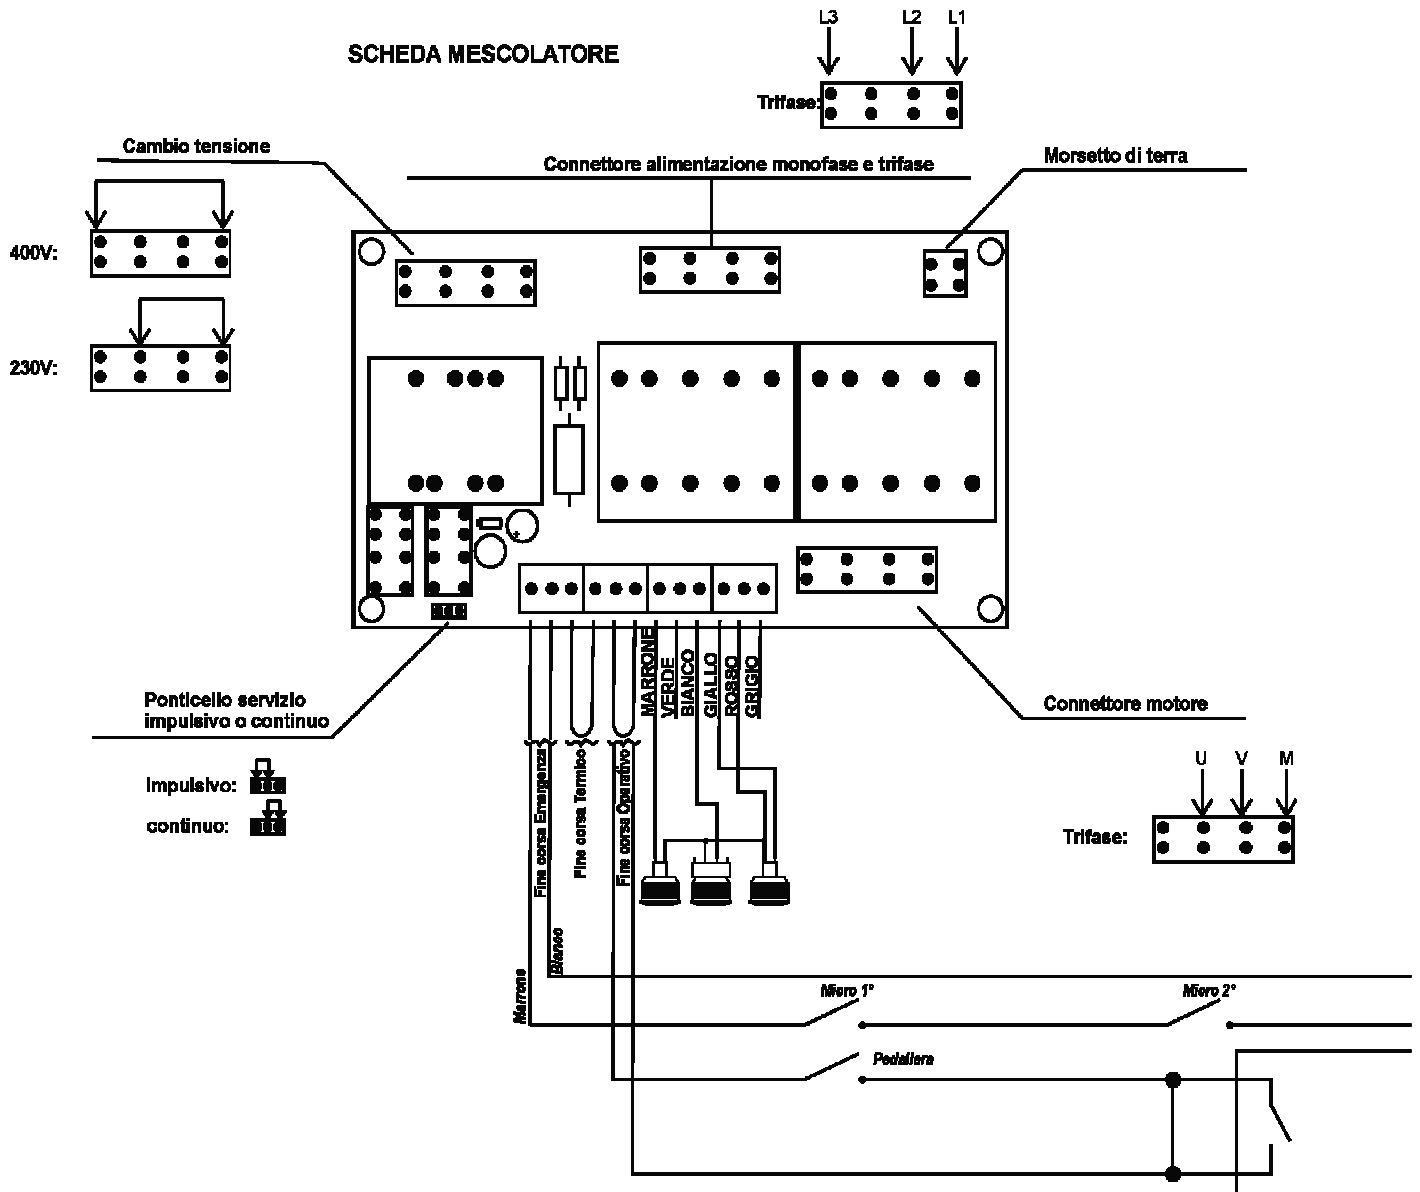

Electrical circuit diagram BG+30T (1phase and 3phase) 2/2

