



M SERIES – Getting into Pre-Pack mode

On the M Series scale-

To get into Pre-Pack mode Press

1. The C button
2. The Number 0
3. The F (fix) button
4. The ENTER button Twice

To get out of Pre-Pack mode Press

5. The C button
6. The Number 0
7. The F (fix) button
8. The ENTER button