

## **Voyager MS9520 Scanner set-up with XM**

Full book C:\Resource Library\Other\MS9520 scanner

First you need to go into the configuration. (Page 1-1 in the manual)

### **Enter/Exit Configuration Mode**



Then recall the Defaults. (Page 1-2 in the manual)

### **Recall Defaults**



Then enable the AIM ID (page 8-4 on the manual)

### **Enable AIM ID Characters**



Once this Enable Aim ID characters have been scanned, scan the Enter/Exit configuration barcode again. If using traceability scan next page

## Enable UCC/EAN-128 'J C1' Code Formatting

Page A3



Scan the Enter/Exit configuration barcode again.

### Enter/Exit Configuration Mode

